



THE ROLL OVER PLATE SITS ON TOP OF THE MAIN RAIL AND THE REAR TYRE SPREADER PLATE

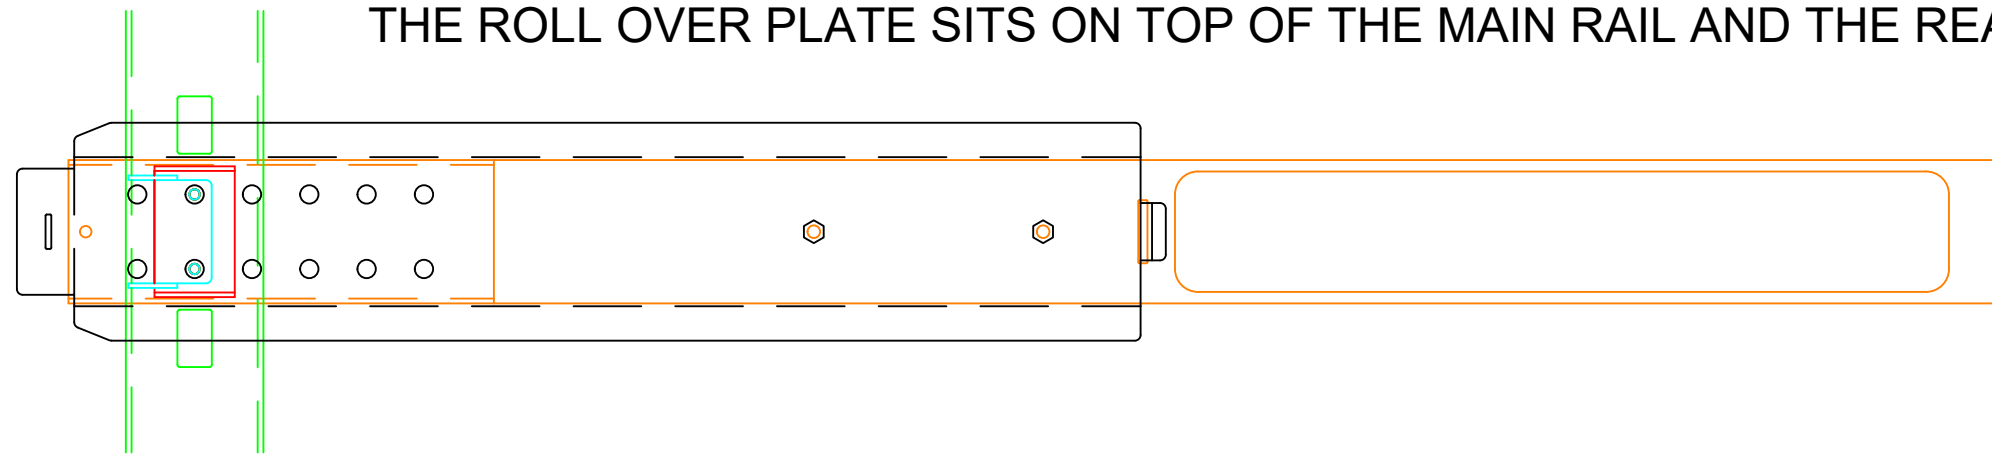

ONCE FITTED THE ROLL OVER PLATE  
STOPS THE BOLTS LOOSENING THAT SECURE  
THE MAIN RAIL TO THE MAIN BAR

TIGHTEN THE MAIN RAIL BOLTS  
SO THEY MATCH THE SHAPE  
IN THE ROLL OVER PLATE

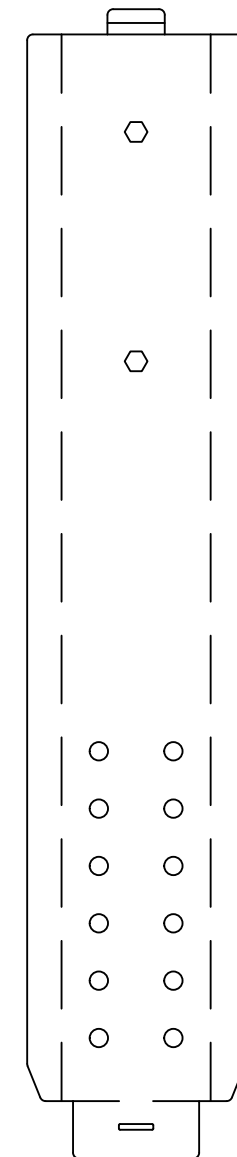

RACK N ROLL TRIKE ASSMEBLY

ROLL OVER PLATE

ALL COPYRIGHT AND OTHER PROPERTY RIGHTS  
CONTAINED HEREIN ARE THE PROPERTY OF RACK N  
ROLL PTY LTD AND ARE NOT TO BE COPIED,  
REPRODUCED OR DISTRIBUTED WITHOUT PRIOR  
WRITTEN CONSENT OF RACK N ROLL PTY LTD

© RACK N ROLL PTY LTD