



ANTI TILT BRACKET and SHIM PLATES


This is designed to limit movement in the tow bar / hitch receiver.

If your vehicle has a plastic surround saying "Toyota", "Nissan" or chrome plastic etc, you need to remove this first.

All receivers are slightly different internal size, some vehicles will need two shim plates, some will fit one, some will fit none, there is no set thing.

Line up the hitch pin hole first, then insert side shim, fit hitch pin.

Then lift the rack and slide base shim underneath.

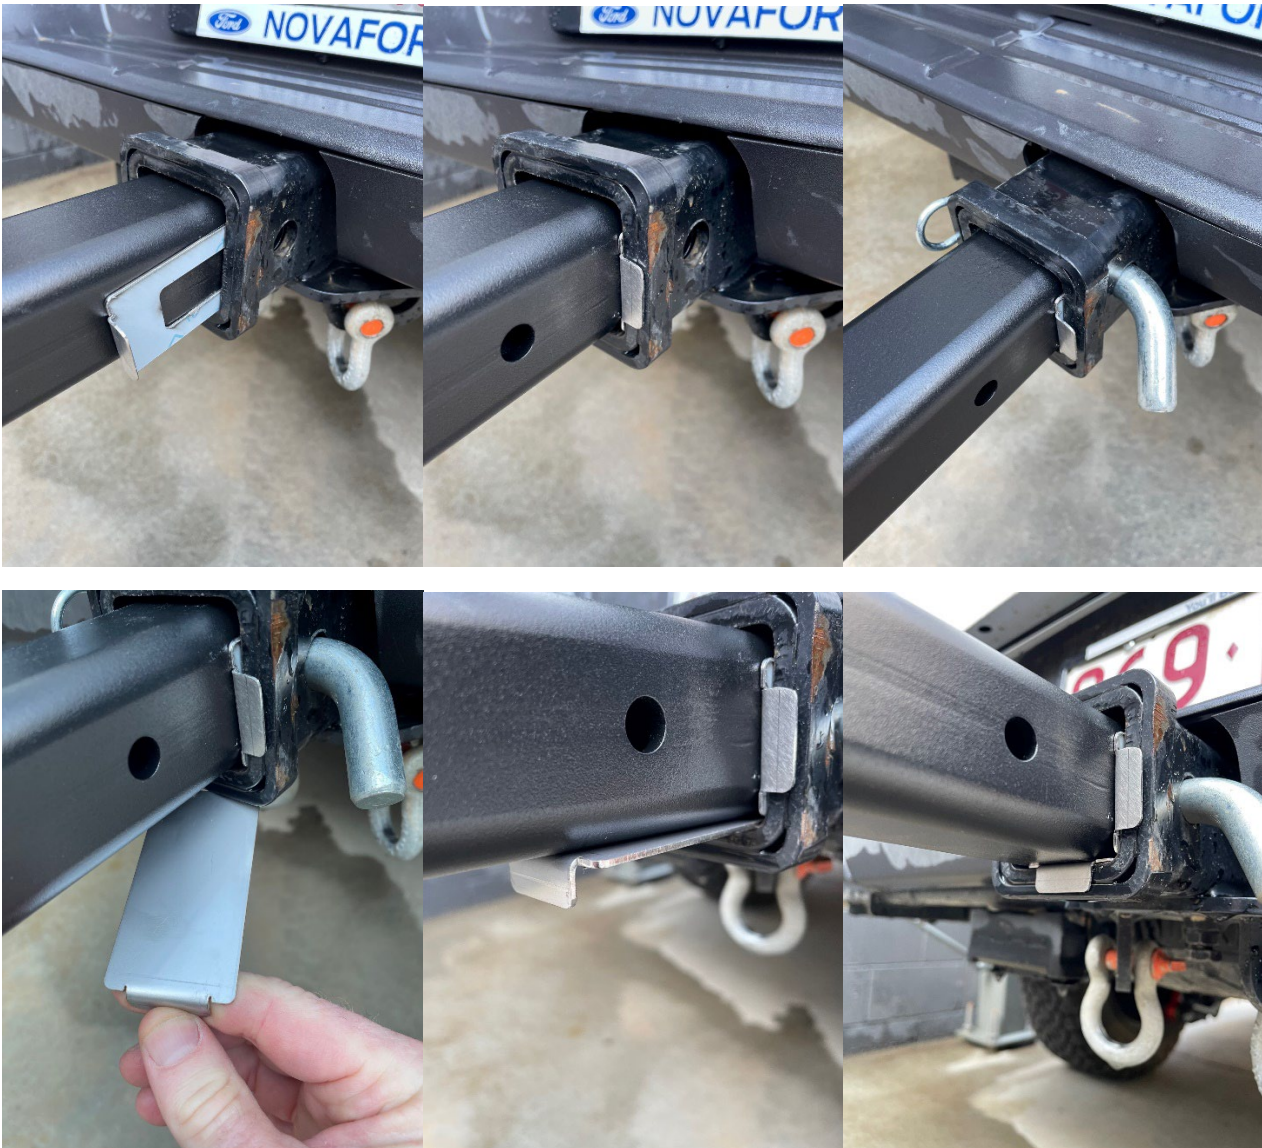

See page 2 below for Anti Tilt Bracket fitment.

Most vehicles will fit Anti Tilt Bracket as below.



In some rare cases the end of the receiver is very close to the bolt hole and you cannot tighten the nut.

See pictures below, you can fit the bolt hard up to the edge of the receiver and fasten nut from opposite side.

